Hynds Mountable and Traversable Wingwalls

Technical Guide D8.3

NZTA accepted design for improved road safety, Hynds Mountable and Traversable Wingwalls are strong, safe and simple to install.



Applications

For use on State and Local Highways

Product Attributes

Manufactured in 40 MPa concrete for high strength and durability

One piece construction for easy installation

Pre-formed hole or soft spot in headwall for simple assembly with the culvert

Suitable for 225 – 1050 mm \varnothing pipe culverts

Includes galvanised steel grate

A marine grade wingwall system can be produced on request


Approvals/Standards

NZTA design acceptance

Galvanised grates proof load tested to 120 kN wheel load

Quality

ISO 9001:2008 Quality Management Standard

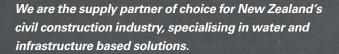




NZTA accepted design for improved road safety, Hynds Mountable and Traversable Wingwalls are strong, safe and simple to install.


Installation


- Mountable wingwalls (1:6) are for installation on culverts running parallel to the carriageway.
- Traversable wingwalls (1:4) are for installation on culverts that cross the highway.
- Wingwalls are fitted with strategically placed lifting anchors cast into the concrete, to allow for safe off-loading and straight forward economical installation by a contractor.
- Spreader beams are required for safe handling.
- Wingwalls should be installed on compacted level hardfill with a suitable trench cut to accept the wingwall toe.
- A softspot in the headwall is provided on the WW0450 models to accept pipes 225 - 450mm.
- In size 600 1050 a preformed hole is provided in the headwall to accept the end of the pipe.
- The contractor finishes installation by filling the gap between the headwall and the pipe with epoxy mortar.




| Product Code | Dimensions (mm) | | | | | | Mass |
|---------------|-----------------|------|------|-----|------|------|--------|
| | Α | В | С | D | ØE | F | - (kg) |
| WW0450TRAVS.4 | 2451 | 2301 | 922 | 93 | 570 | 890 | 1980 |
| WW0450MOUNT.6 | 3600 | 3450 | 922 | 93 | 570 | 890 | 2780 |
| WW0600TRAVS.4 | 3070 | 2920 | 1080 | 80 | 750 | 1200 | 3081 |
| WW0600MOUNT.6 | 4530 | 4380 | 1080 | 80 | 750 | 1200 | 4419 |
| WW0750TRAVS.4 | 3710 | 3560 | 1240 | 75 | 915 | 1365 | 4230 |
| WW0750MOUNT.6 | 5490 | 5340 | 1240 | 75 | 915 | 1365 | 6057 |
| WW0900TRAVS.4 | 4340 | 4190 | 1400 | 60 | 1090 | 1540 | 5053 |
| WW0900MOUNT.6 | 6450 | 6300 | 1400 | 60 | 1090 | 1540 | 7985 |
| WW1050TRAVS.4 | 5030 | 4880 | 1620 | 100 | 1270 | 1720 | 7112 |

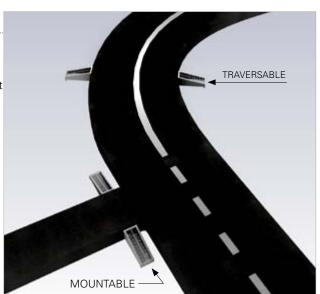

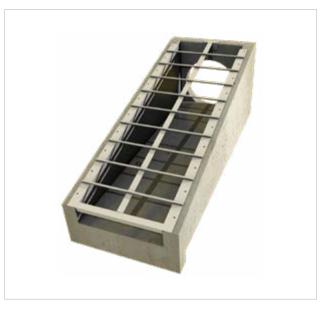

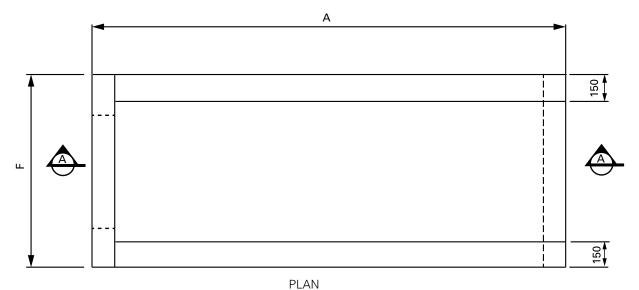

Scale: NTS

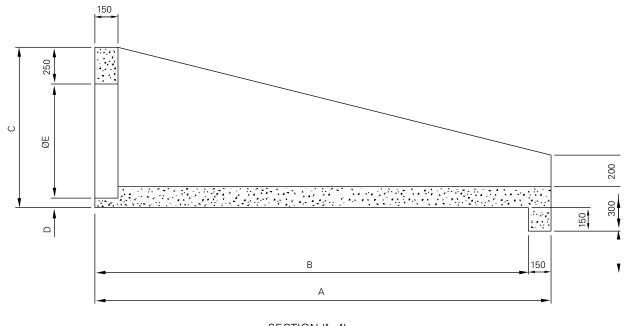

SECTION 'A-A'
Scale: NTS

Also refer to:

Branches Nationwide Support Office & Technical Services 09 274 0316

Disclaimer: While every effort has been made to ensure that the information in this document is correct and accurate, users of Hynds product or information within this document must make their own assessment of suitability for their particular application. Product dimensions are nominal only, and should be verified if critical to a particular installation. No warranty is either expressed, implied, or statutory made by Hynds unless expressly stated in any sale and purchase agreement entered into between Hynds and the user.



